




How to double glove and sleeve safely for tool reprocessing

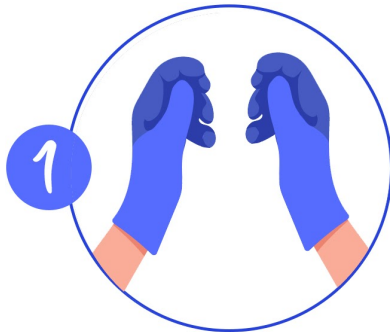


1 Start with a fresh pair of correctly sized examination gloves

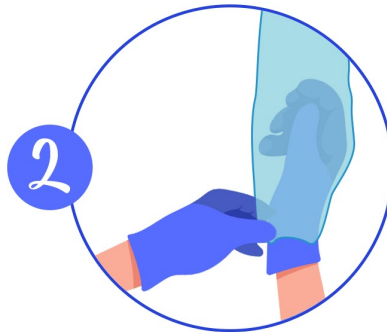

2 Pull arm-sleeve over gloved hand

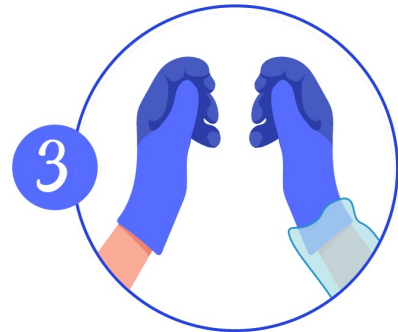


3 Ensure sleeve sits over the top of cuff

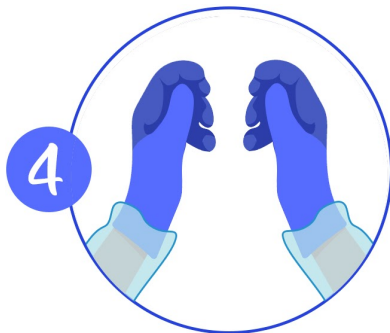

4 Pull sleeve over your other arm



5 Don a second pair of examination glove **OVER** the arm sleeve (preferably a different color)

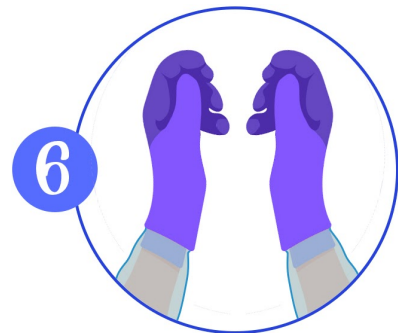

6 Check regularly for visibility of under-gloves to detect potential punctures